



Recommended Mounting Heights

DIM'S mm(inch)	A From Top of Hand Drying Chamber	B From Datum Point	C From Bottom of Dryer
Men	1219 (48")	750 (29-17/32")	662 (26-1/16")
Women	1143 (45")	674 (26-17/32")	586 (23-5/64")
Children 4-10 years	940 (37")	471 (18-35/64")	383 (9-59/64")
Children 11-16 years	1067 (42")	598 (23-35/64")	510 (15-5/64")
Handicapped	902 (35-1/2")	434 (17-3/32")	346 (13-5/8")

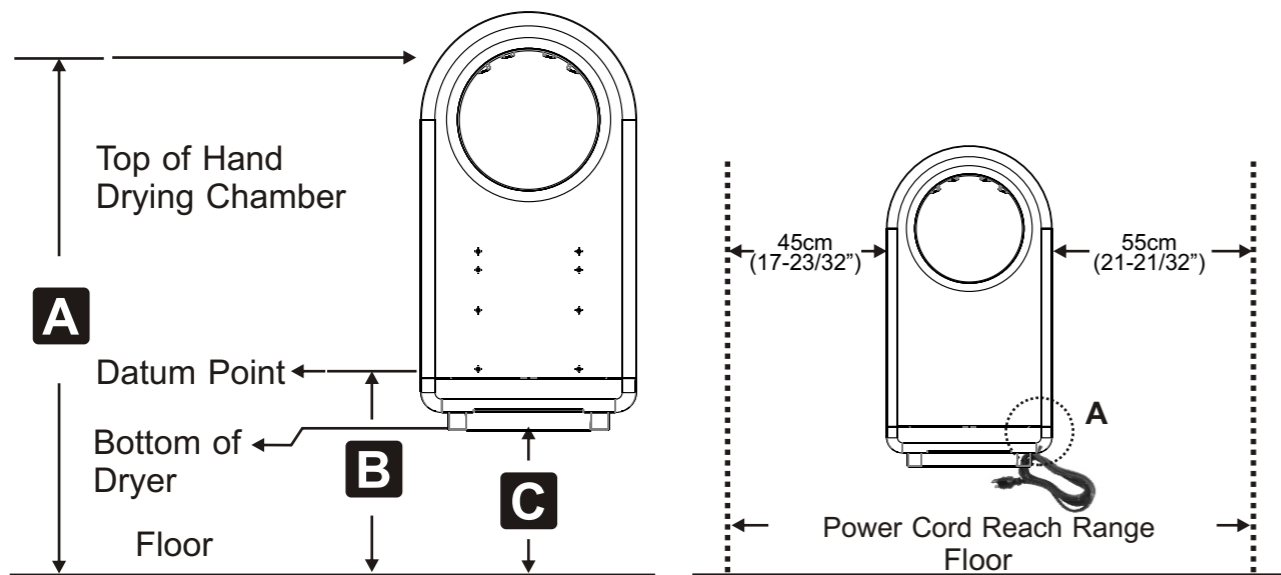

Socket Location

The dryer is supplied with a power cord. The power cord entry position is in the rear, right side bottom of dryer. The length of the power cord is 1M (39-3/8"). The power cord can reach to the right side within the distance of 21-21/32" (55cm) and reach to the left side within the distance of 45cm (17-23/32"). Alternatively the unit may be hard wired to a rear panel KO.

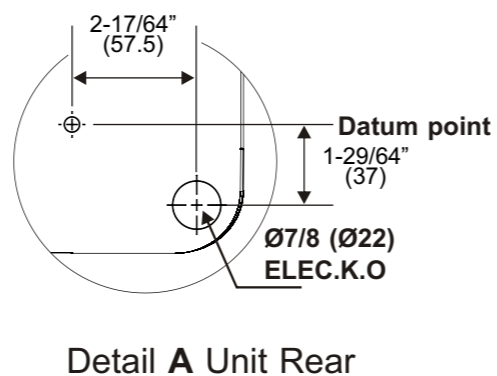

General safety information:

⚠ WARNING This product is intended for installation by a qualified service person. Select wire ga to suit unit model ratings.

⚠ DANGER Failure to properly ground unit could result in severe electrical shock and/or death.

⚠ WARNING Disconnect power at the service breaker before installing or servicing.

⚠ WARNING All units must be supplied with a 3-wire service. The ground wire must be connected to the dryer's ground terminal.

TAPE THIS SHEET TO WALL FOR HOLES LOCATION

