


A ⊕

MOUNTING INSTRUCTIONS


THIS PRODUCT IS INTENDED FOR INSTALLATION BY QUALIFIED SERVICE PERSONNEL ONLY.
USE AWG NO. 14 SOLID CONDUCTOR FOR WIRING.

⊕ B

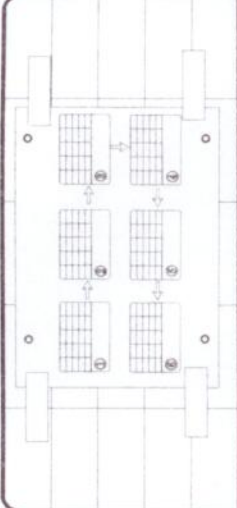


1

FIX THE MOUNTING INSTRUCTION SHEET TO THE WALL WITH HOLES C AND D
130 CM FROM THE GROUND.

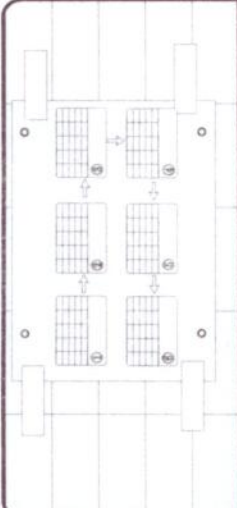


2

DRILL THE FOUR HOLES A, B, C AND D,
8MM DIAMETER, 35MM DEEP.

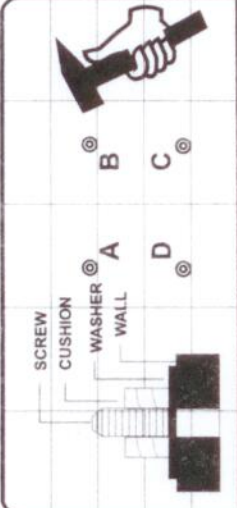


3

REMOVE THE MOUNTING INSTRUCTION SHEET.
HAMMER THE DOWELS SUPPLIED INTO THE FOUR HOLES.




6

INSTALL THE HOUSING BACK TO THE BASE PLATE AND SECURE THE HOUSING IN PLACE.

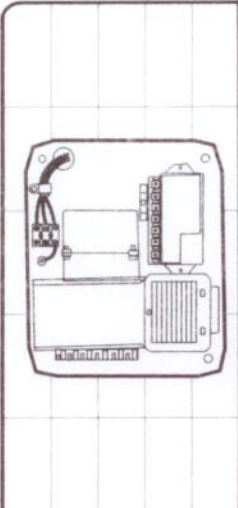

5

CONNECT THE POWER CORD TO THE TERMINAL AND TIGHTEN THE SCREWS.
IMPORTANT: DO NOT LIFT THE DRYER BY THE ELECTRICAL PARTS.

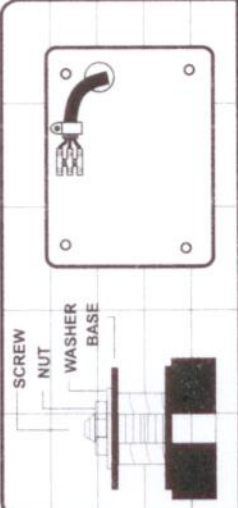

4

REMOVE THE HOUSING FROM THE BASE.
PUT THE POWER CORD AT LEAST 7CM THROUGH THE HOLE IN THE BASE PLATE.
SECURE THE BASE PLATE TO THE WALL.

D ⊕

130CM FROM THE GROUND IS SUITABLE

⊕ C